


Instruction Manual

Model 2098-007 Frequency Source

January 2010 Rev A

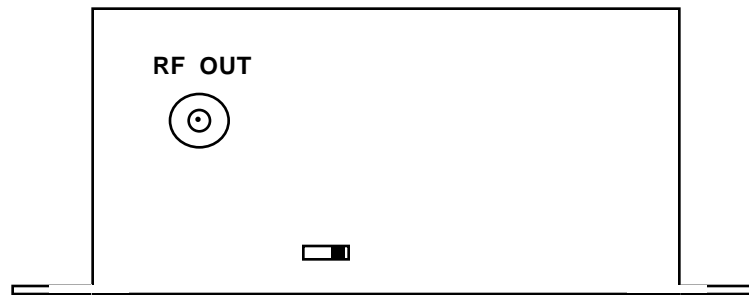

Data, drawings, and other material contained herein are proprietary to Cross Technologies, Inc., but may be reproduced or duplicated without the prior permission of Cross Technologies, Inc. for purposes of operating the equipment. Printed in USA.

When ordering parts from Cross Technologies, Inc., be sure to include the equipment model number, equipment serial number, and a description of the part.



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB: www.crosstechnologies.com
E-MAIL: info@crosstechnologies.com


INSTRUCTION MANUAL

2098-007 FREQUENCY SOURCE

<u>TABLE OF CONTENTS</u>	<u>PAGE</u>
Warranty	2
1.0 General	3
1.1 Equipment Description	3
1.2 Technical Characteristics	4
2.0 Installation	5
2.1 Mechanical	5
2.2 Controls and Indicators	5
2.3 Input / Output Signals	5
2.4 Installation/Operation	7
2.4.1 Installing and Operating the 2006	7

WARRANTY - The following warranty applies to all Cross Technologies, Inc. products.

All Cross Technologies, Inc. products are warranted against defective materials and workmanship for a period of one year after shipment to customer. Cross Technologies, Inc.'s obligation under this warranty is limited to repairing or, at Cross Technologies, Inc.'s option, replacing parts, subassemblies, or entire assemblies. Cross Technologies, Inc. shall not be liable for any special, indirect, or consequential damages. This warranty does not cover parts or equipment which have been subject to misuse, negligence, or accident by the customer during use. All shipping costs for warranty repairs will be prepaid by the customer. There are not other warranties, express or implied, except as stated herein.

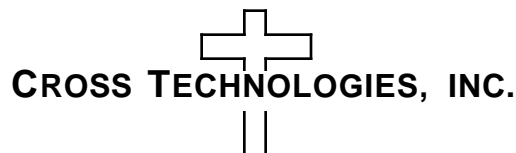

6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com


2098-007 FREQUENCY SOURCE

SECTION 1 GENERAL

1.1 Equipment Description-

The Model 2098-007 Frequency Source, is a 70 MHz, synthesized frequency generator.

The 70.000 MHz signal is generated by the VCO controlled by the Phase Lock Loop circuit which is referenced to a 25 MHz Crystal oscillator. The 70 MHz is applied to an amplifier and then to the output switch/attenuator providing a level of 0.0 dBm (high) or -15 dBm (low). A green LED indicates the presence of DC power. Power is provided by a wall transformer for 115 VAC, 60Hz and provides +15 VDC at 150 ma. The Option -P4 wall power supply covers 100-240 \pm 10% VAC, 47-63 Hz. Specify US, EUR, AUS or UK plug for the -P4 option. The connector is BNC female for the 70 MHz output and the impedance is 75 ohms.

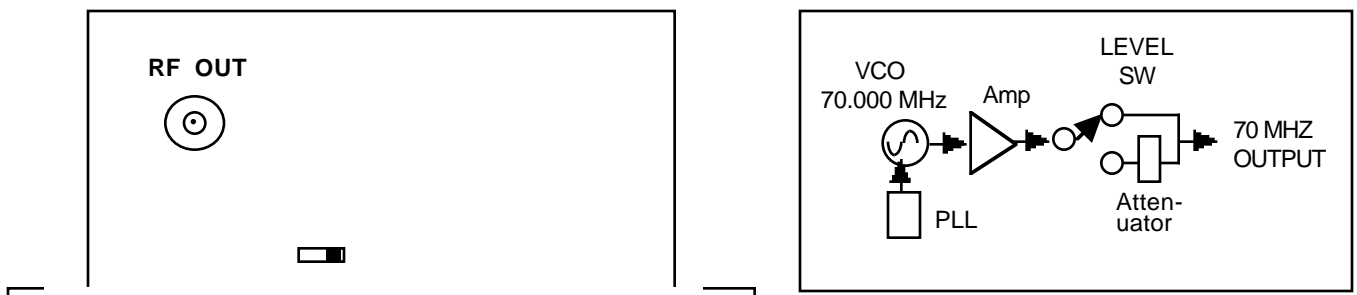

2098-007 Frequency Source Chassis and Block Diagram

1.2 Technical Characteristics

TABLE 1.0 2098-007 UPCONVERTER SPECIFICATIONS*

Output Characteristics

Impedance	75 Ω
Return Loss	>15 dB
Frequency	70.000 \pm 0.0005 MHz
Level	0.0 dBm \pm 0.5 dB(high level); -15 dBm \pm 0.5 dB(low level)
Harmonics	< -30 dBC, max, -35 dBC typ for second and third, <-50 dBC for all others
Spurious	< -60 dBC, max

Synthesizer Characteristics

Frequency Accuracy	\pm 0.5 kHz max. over time and temperature, \pm 0.25 kHz, typical
Phase Noise (dBC/Hz)	\leq -100, 10 kHz; \leq -120, 100 kHz; \leq -130, 1 MHz
Frequency Selection	NONE: Fixed tuned

Controls/Indicators

Level Select	Slide switch selects High (0 dBm) or Low (-15 dBm) level
DC Power	Green LED

Other

RF Output Connector	BNC, female
Size (W x H x D)	3.3 x 1.2 x 4.0 (in.); 83.8 x 30.5 x 101.6 (mm)
Power	Wall power supply is for 115 VAC, 60Hz and provides +15 VDC, 150 ma option -P4 covers 90-260 VAC, 47-63 Hz. Specify US, EUR, AUS or UK plug

*+10 to +40 degrees C; 2000 meters max elevation; 80% max humidity; Pollution Degree 2; Specifications subject to change without notice.

2.0 Installation

2.1 Mechanical - The 2098-007 is packaged in an aluminum chassis. The unit can be mounted to a panel using the 2 holes at the bottom side flange. The unit derives +DC (+15 VDC, 150 ma) from a wall mount power supply. (See Figure 2.1 and Figure 2.2).

2.1.1 Cleaning Instructions - Wipe the exterior with a dry, soft cloth. Use no detergent or cleaning chemicals.

2.2 Controls and Indicators - The Level switch controls the output level at 0.0 dBm (high) or -15 dBm (low) . A green LED indicates presence of DC power (Figure 2.3).

2.3 Input / Output Signals - Figure 2.3 shows the input and output signals to the 2098-007.

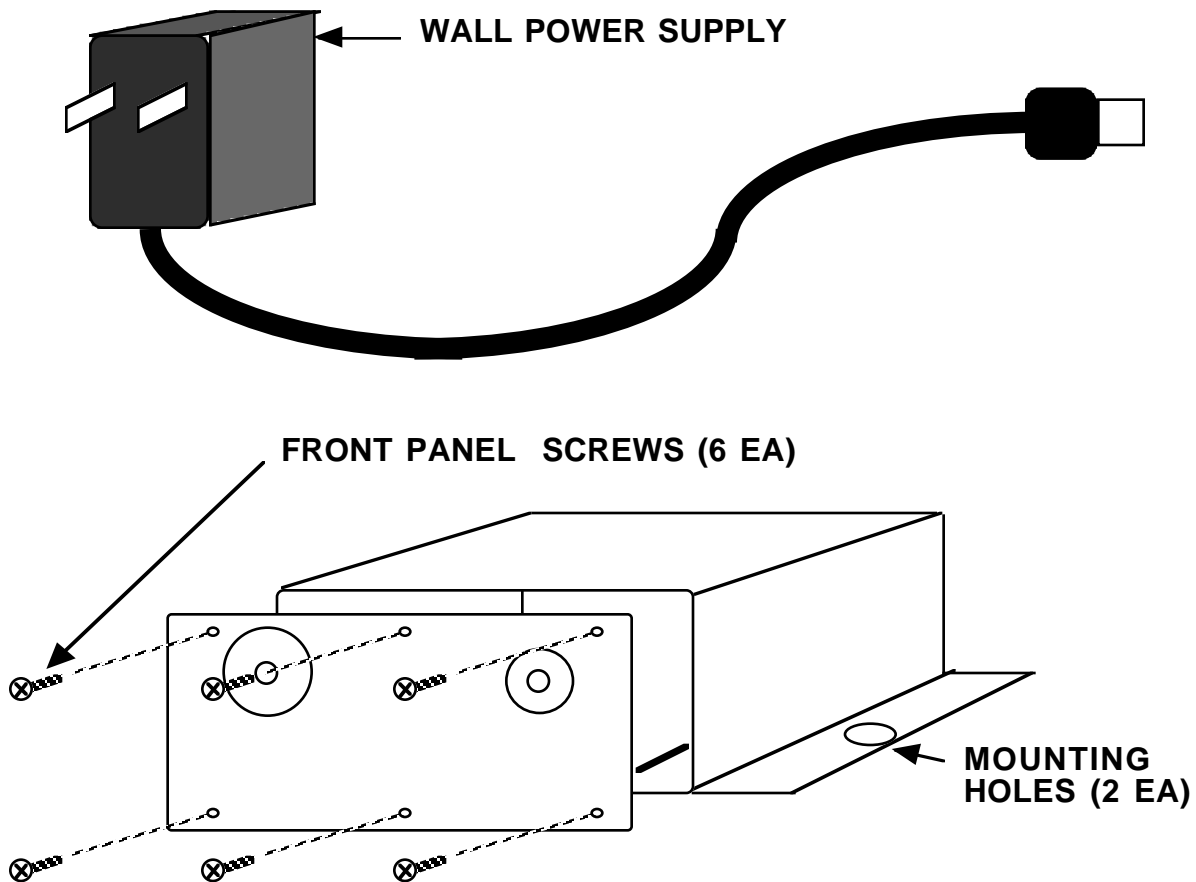


FIGURE 2.1 2098-007 ASSEMBLY DRAWING


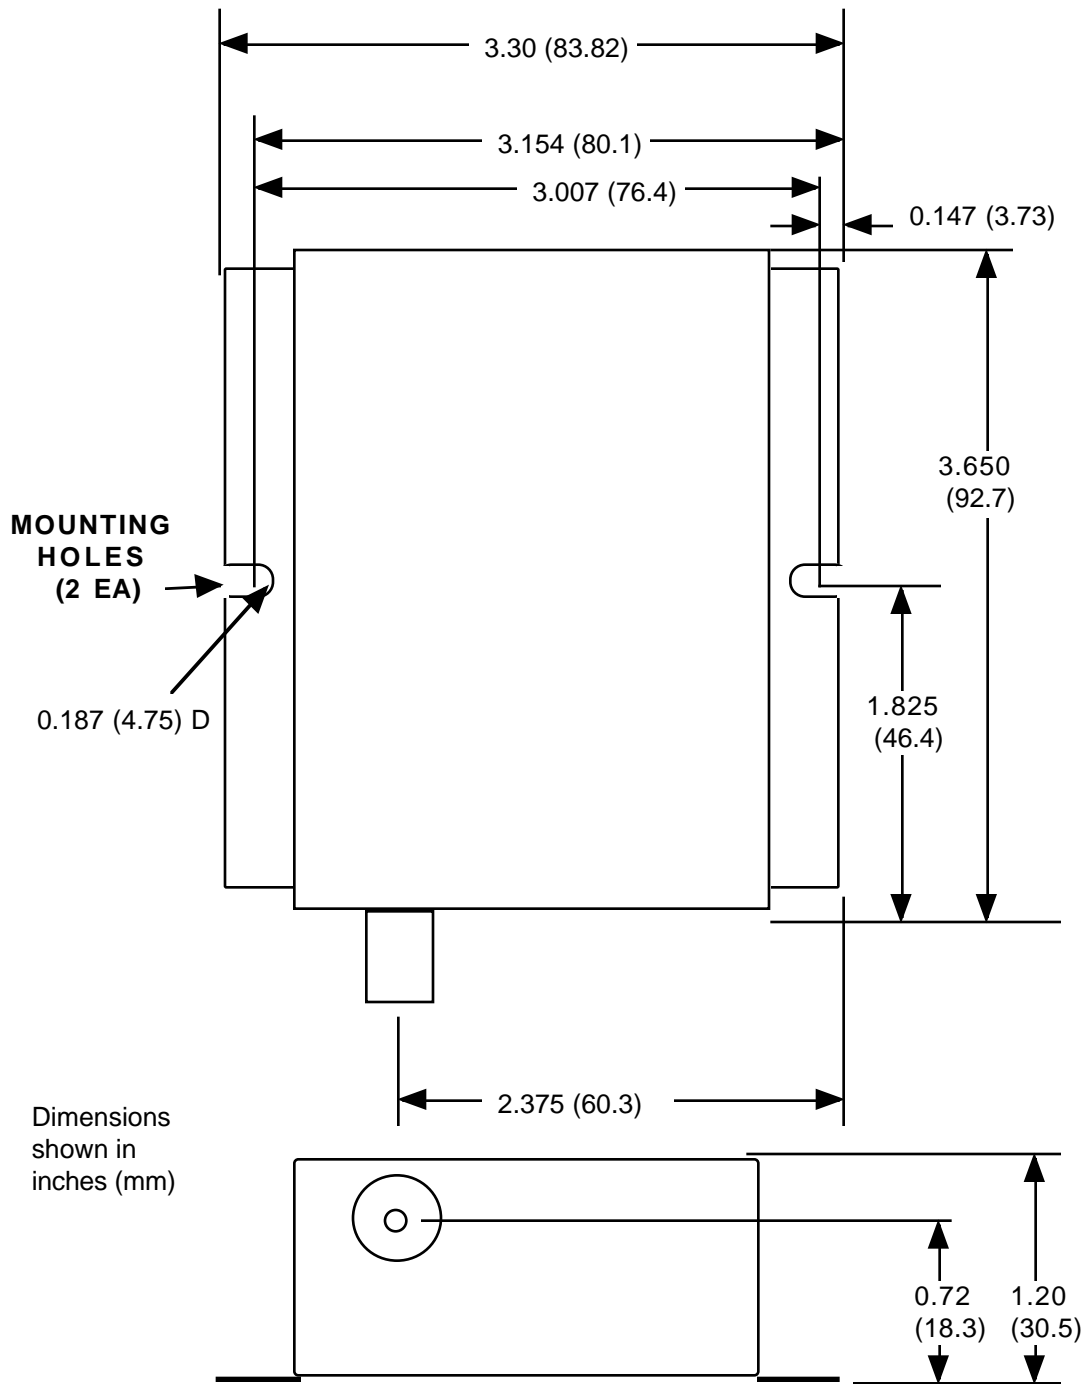




Figure 2.2 2098-007 Package Dimensions

J1 - RF Output -
The 70.000 MHz
output . This is a 75Ω,
BNC input at o
0 or -15 dBm level.

S1 - Level Switch -
Selects Low (-15
dBm), left, or High (0
dBm), right, level.

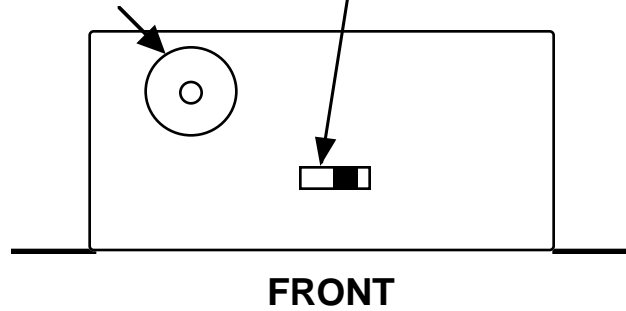

J3 - DC POWER - The +15 VDC
unregulated DC voltage from the wall
power supply

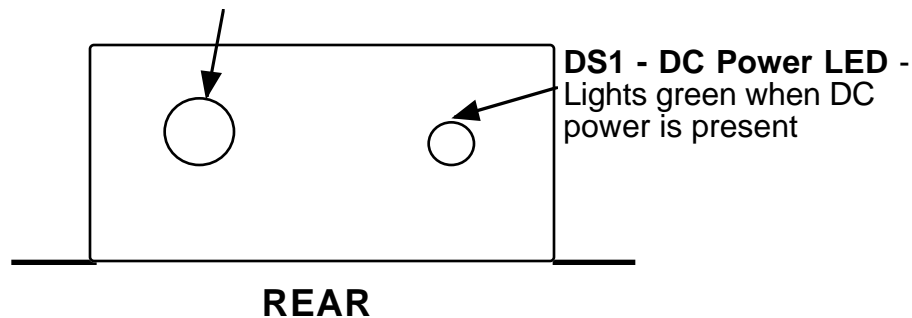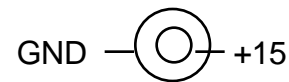

**Figure 2.3 2098-007 Input, Output,
Power LED, External DC In**

2.4 Installation / Operation -

2.4.1 Installing and Operating the 2098-007 -

- 1.) Secure the 2098-007 to a panel using the two bottom mounting holes (see Figure 2.1 and Figure 2.2)
- 2.) Connect the unregulated +15 VDC from a wall power supply provided to the 2098-007 and the wall power supply to the AC.
- 3.) Observe that green power LED (DS1) is illuminated.
- 4.) Select High (0 dBm) or Low (-15 dB) Level with S1.
- 5.) Connect the RF OUT, J1, to the external equipment



6170 Shiloh Road
Alpharetta, Georgia 30005

(770) 886-8005
FAX (770) 886-7964
Toll Free 888-900-5588

WEB www.crosstechnologies.com
E-MAIL info@crosstechnologies.com

Printed in USA